


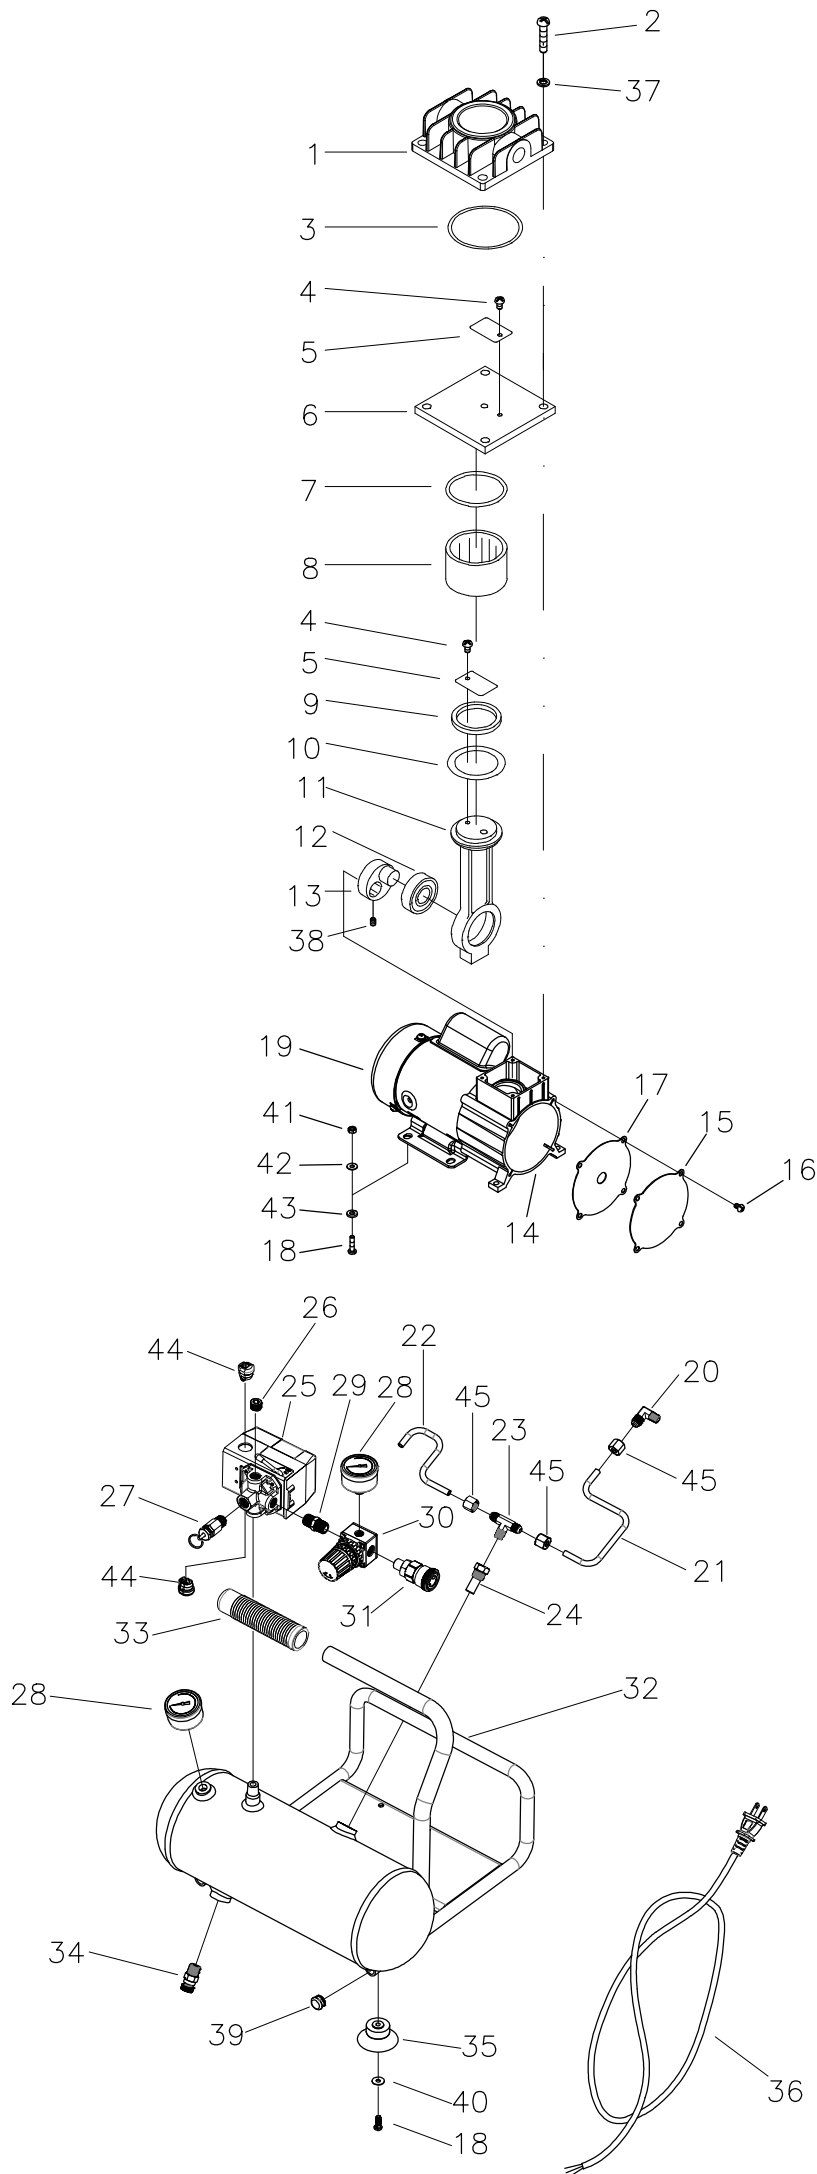

INDEX: LVI0204PT

NO.	DESCRIPTION	PART NO.	QTY
1	Cylinder head	101017	1
2	Bolt/washer cylinder head	353015	4
3	O-Ring	333011	1
4	Round-head bolt	353148	2
5	In & Outlet valve plate	115004	2
6	Outlet valve seat	114006	1
7	O-Ring	333005	1
8	Cylinder	201020	1
9	Ring press plate	218001	1
10	Piston ring plate	208003	1
11	Piston rod	316009	1
12	Bearing	315017	1
13	Crankshaft	302024	1
14	Crankcase	301020-1	1
15	Crankcase front cover	304019	1
16	Round-head bolt	353021	4
17	Front cover packing	215014	1
18	Round-head bolt	353024	8
19	Motor	F04H-JP34	1
20	Unloading elbow	151002	1
21	Unloading tube	F09C-JP34	1
22	Unloading tube	F09D-JP34	1
23	Unloading elbow	152101	1
24	Check Valve	409017	1
25	Pressure switch	412012	1
26	Tube plug	360011	1
27	Safety valve	407001	1
28	Pressure gauge	411012-1	2
29	Nipple	441003	1
30	Regulator valve	410003	1
31	Quick coupler	447024	1
32	Air tank	401143-07	1
33	Rubber handle	435011	1
34	Drain cock	406001	1
35	Tank feet	F134-JP34	4
36	Power wire	452052	1
37	Spring Washer	382002	4
38	Headless hex bolts	356005	1
39	Tube plug	439011	2
40	Plastic washer	381021	4
41	Out six-angle nut	371003	4
42	Plate washer	381022	4
43	Plastic washer	384003	4
44	Strain relief clip	457005	2
45	Tube nut	373001	3