
## 2115Qi and 2125Qi Air Impactool™ - Exploded View

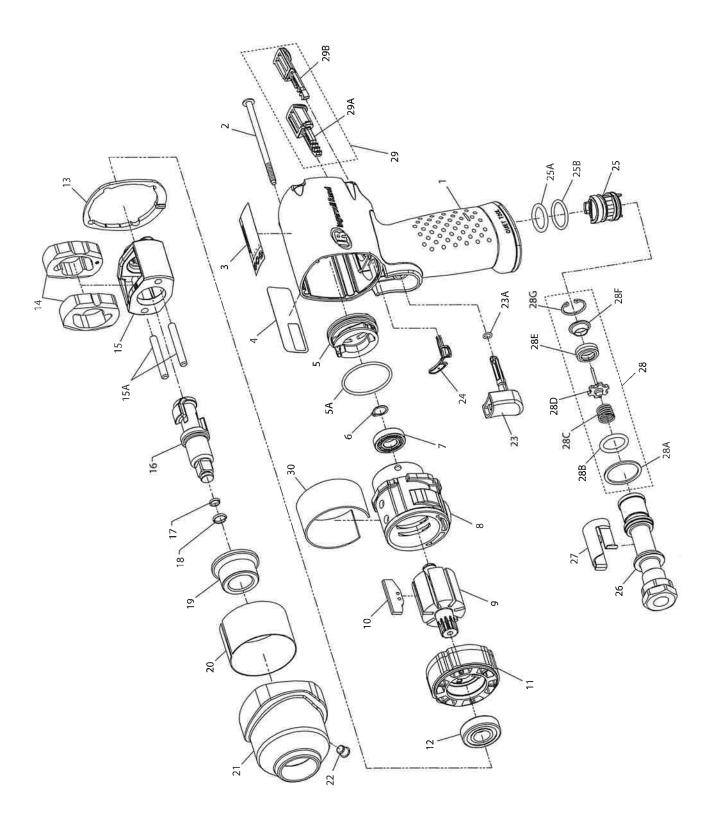

(Dwg. 45609054)





## 2115Qi and 2125Qi Air Impactool™ - Parts List

ltem	Part Description	Part Number	Item	Part Description	Part Numbe
*	Housing Assembly		22	Grease Fitting	130SR-188
	for model 2115Qi	2115Qi-A40	+*	Trigger Assembly	2135-D93B
	for model 2125Qi	2125Qi-A40	23	Trigger	
1	Housing	•••	23A	O-Ring, Trigger	<del>101</del>
3	Warning Label	5570	† 24	Gasket, Motor	2112-283
4	Information Label	(###C)	*	Reverse Valve Assembly	2131-A329
24	Gasket, Motor		25	Reverse Valve	
*	Reverse Valve Assembly		25A	O-Ring, Reverse Valve (Top-Black)	
29	Button Kit		25B		
2	Screw, Hammer Case (4 required)	2115-638	*	Inlet Bushing Assembly	2135-D565A
	Warning Label	WARNING-2-99	26		
	Information Label		27	Inlet Clip	2131-57
,	for model 2115Qi	2115Qi-300	28	Inlet Parts Kit	2135-K303
	for model 2125Qi	2125Qi-300	28A	Washer	
*	Power Regulator Assembly	2115-D249A	28B	O-Ring, Seal	***
5			28C	Throttle Spring	
5A			28D	Throttle Valve	
	Retaining Ring	4E-6	28E	Valve Seat	
	Ball Bearing (Cylinder)	R00H-97	28F	Seat Support	
	Cylinder	2112-3	28G		
	Rotor	2115-53	29	Button Kit	2115-K75RD
	Vane Pack (set of 7)	2115-42A-7	29A	Forward Button	
	End Plate	2112-11	29B		122
	Ball Bearing (End Plate)	2131-97		Silencer	2115Q-311
	Hammer Case Gasket	2115-36	*	Tune-Up Kit	2115-TK2
*	Hammer Mechanism Kit	2115-THK2	5A		***
14			6		
15		1944	7		
15A	Hammer Pin (2)		10		
*	Anvil Assembly		12		
	for model 2115Qi	2112-A626	13	3,	
	for model 2125Qi	2112-A726	23A		
16	Anvil	21127020	24		
*	Socket Retainer Kit		25A		
	Socket Retainer Kit		25B		220
	for model 2115Qi (3/8" Ring-type)	2115-K425	28		220
	for model 2125Qi (1/2" Ring-type)	2125QTi-K425	*	Kit, Piped-Away Exhaust	2115-K284
17		2125Q11K125	*	Inlet Clip Removal Tool	2131-322
18			+*	Air Care Kit (grease gun, grease, oil)	115-LBK1
	Bushing, Hammer Case	2112-641	*	Grease (replacement tube for -LBK1)	115-4T
19		2115AL-D727A	*	Air Tool Oil (4 oz. bottle)	10Z4
19		ZITJAE-D/Z/A	*	Grease (1 lb can)	105-1LB
20			*	Grease (8 lb can)	105-8LB
21			*	Grease Gun	R000A2-228
22		***		Jarease Guil	1

<sup>\*</sup> Not illustrated.

## **Parts and Maintenance**

When the life of the tool has expired, it is recommended that the tool be disassembled, degreased and parts be separated by material so that they can be recycled.

Tool repair and maintenance should only be carried out by an authorized Service Center.

Refer all communications to the nearest Ingersoli Rand Office or Distributor.

## **Related Documentation**

For additional information refer to:

Air Impact Wrench Product Safety Information Manual 04580916.

Air Impact Wrench Product Information Manual 45553518.

Manuals can be downloaded from www.ingersollrandproducts.com.



<sup>†</sup> To keep downtime to a minimum, it is desirable to have certain repair parts on hand. We recommend that you stock one (pair or set) of each part indicated by a (†) for every four tools in service.