

EasyReach™

Operating Instructions

USING THE LOCKING TRIGGER

1. When Trigger Lock is in the UP position, use trigger pressure only to hold or release an object. (Figure 1)
2. Slide the Trigger Lock to the DOWN position to grip and hold an object without further trigger pressure. (Figure 2)
3. To release the object, squeeze the trigger and slide the Trigger Lock UP. Then release the trigger. (Figure 2)



TO EXTEND FOLDING MODELS

1. Unfold the EasyReach so that the sections line up with each other.
2. Slide the sleeve FORWARD over the sections to secure. (Figure 3)
3. To fold again, Slide sleeve BACK, then fold the sections neatly for storage.



MAINTENANCE

The rubber cups may become worn over time. To replace, order part # RE-CUPS.

OTHER SIZES AVAILABLE

Length

32 inch
40 inch
60 inch – Folding Model
72 inch – Folding Model
96 inch – Folding Model
120 inch – Folding Model

Catalog

32RE EA340X-80
40RE EA340X-100
60REF
72REF EA340XA-180
96REF EA340XA-240
120REF EA340XA-300



General Wire Spring Co.
1101 Thompson Avenue
McKees Rocks, PA 15136