

EA584AA

(ネジエクストラクターキット)


- ダメージを受けたネジヘッド抜き取り工具
- 工具鋼製
- 電動ドリルと併用します。
電動ドリルは左回転(反時計方向)のみで使用してください。
- 適応サイズ

ドリルナンバー	適応ネジサイズ
NO.1	#6-#8
NO.2	#8-#10
NO.3	#10-#14

- 使用回転数 約30~70rpm
- 先端拡大




- 全長 51mm
- サイズ

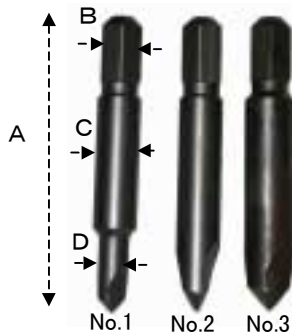

ドリルナンバー	A	B	C	D
NO.1	51	6.3	7	4.8
NO.2	51	6.3	7	—
NO.3	51	6.3	8	—

(単位mm)

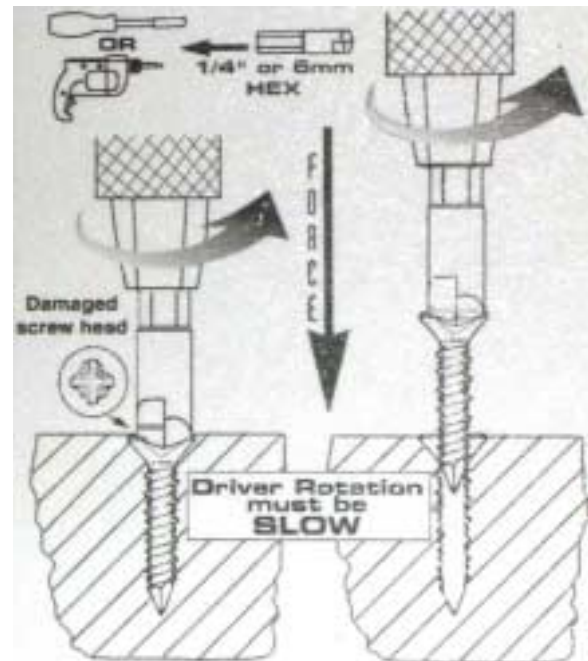

Removes these types of screws

(使用例)



(参考)

Operating Instructions:

1. Determine the size screw head and choose the appropriate remover as marked on the case.
2. Insert extractor into drill chuck or hex screwdriver.
3. Set drill to "Reverse" (COUNTERCLOCKWISE).
4. Place remover tip on center of screw and press down maintaining pressure on the screw. Drill or screwdriver should be turning counterclockwise. **IMPORTANT:** If using electric drill, apply only the lowest level of power so the chuck turns extremely slowly.
5. Remover will bite into the screw and begin to turn the screw out.
6. For Stubborn Screws: Apply more pressure and pivot tool 5 or 10 degrees from centerline of screw. Maintain a very slow speed on driver. Do not increase speed of drill.
7. Removers are reusable. Clean off any wood or metal chips and lubricate with light machine oil after use.

