 


Cordless Sitalamp 3 Head Design

LED-685


RoHs

IP54

IK07

Triple Head sitalamp for 360° multi-directional illumination

Easy set-up light, this is ideal for use in automotive repair work, roadside emergencies, construction sites, camping etc.

Adjustable 3 blades design for multi-directional light. Heads can be independently rotated to cast light in several directions simultaneously

Control panel to adjust intensity & switch between warm and cool light

	1ST PRESS	2ND PRESS	3RD PRESS	WHILE CHARGING
INTENSITY	LOW	MEDIUM	HIGH	MEDIUM
LUMEN	700	1200	2000	1200
RUN TIME	8.5 hours	3.5 hours	1.5 hours	-

Sturdy Construction

- IP 54 Rated**
Protected against dust and effects of water spray from any direction
- IK 07 Rated**
Impact proof & corrosion resistant aluminium Body in premium powder coated finish. ABS edge guards make it resistant to shocks and vibration – common on any jobsite
- Nylon hook with 360° rotating action


Versatile Use

Can be used as

- Compact and portable, free standing floodlight bright enough to light up large areas
- Attached to any metallic surface using the magnetic base
- On tripod stand to light overhead work and minimize shadows when directing the light downwards

Charging of Battery

Type-C fast charging protected by rubberized bezel. Charge indicated via 4 LED's, each showing 25% charge

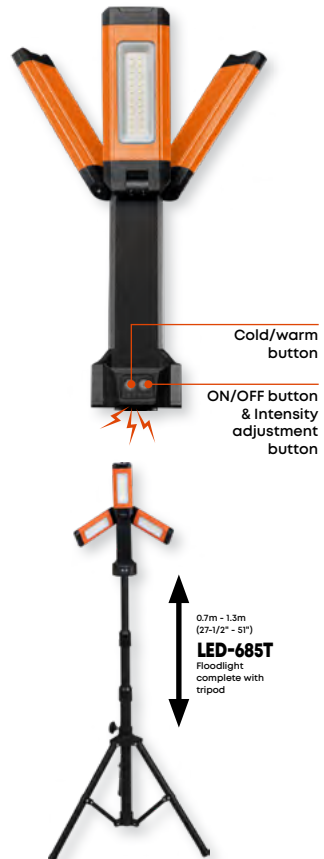

CAT NR.	DESCRIPTION	SIZE (LxHxD)	
		(INCH)	(MM)
LED/685	Sitalamp	25-63/64 × 2-31/32 × 3-3/16	660 × 75.5 × 81
LED/685T	Sitalamp complete with tripod	28-17/64 × 6-27/64 × 19-9/16	718 × 1630 × 497

Power Source



3.7V 4000 mAh

SAFETY INFORMATION

- Follow workshop health & safety rules, regulations and conditions when using Worklight.
- When not in use, Worklight should be stored in a dry location.
- During their period of use, accessories must be checked for wear, cracks and other damage, replace any damaged or worn parts immediately.
- Use genuine parts only. Unauthorized parts may be dangerous and will void the warranty.
- Keep the Worklight clean and in good working order for best and safest performance.
- DO NOT use the lamp in the immediate vicinity of inflammable materials or gases.
- DO NOT point the light directly in your own or any other person's or animal's eyes.
- DO NOT drop, throw or misuse the Worklight.
- Eyes protection: Wear a protective mask or protective eyewear.
- Check that the product has not suffered any damage during transport or storage. Clean and remove any dust or residual packing material.
- Read the instructions carefully before using Worklight and keep them for further reference.

WARNING!

- DO NOT immerse Worklight in water.
- DO NOT place Worklight near a fire or any other source of intense heat.
- DO NOT attempt to open, disassemble, modify or service the Worklight.
- DO NOT expose Worklight to temperatures above 50°C (122° F).
- DO NOT use Worklight if you suspect that the batteries or the casing is damaged

PACKAGE CONTENT

DESCRIPTION	QUANTITY
Worklight	1
Charging Cable	1
O.I.P.M.	1
Adaptor*	1
Tripod**	1

*Adaptor comes with LED/s85A/N

**Tripod and adaptor comes with LED/s85T/N

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
The Worklight has low lumen output or does not work.	Low battery	Recharge the battery
If the Worklight still doesn't work	Battery degraded	Replace battery or visit nearest workshop

DISPOSAL

The components or the used products must be given to companies that specialize in the disposal and recycling of industrial waste.

OPERATING INSTRUCTIONS

For worklight use without tripod

- Indicator of mode and battery at the back of worklight.
- Fully charge the battery before the first use. To charge, connect the Worklight with the USB charger cable provided. Connect the USB charger to the power source.
- While charging, the 4 blue indicator LED at the back will blink continuously each showing 25% of total.
- When the battery is fully charged, all the indicator LEDs will stop blinking. Full charging takes about 4 hours.
- Press the power button located at the top of the light to turn ON.
- 3 Modes of the light can be controlled by pressing first 700, second 1200 and third 2000 lumens respectively.
- Press the mode change button for switching between warm light and cool light



How to mount Worklight on tripod

Use Adaptor & Tripod.

- Screw in Adaptor (M6 x 1) thread in Tripod.
- Then, screw in Adaptor (M20 x 25) thread in Worklight.

MAINTENANCE

- Clean any dirt from the housing or the lens immediately, since it could cause overheating.
- If required, clean with a dry or slightly moist clean cloth. Do not use cleaners that contain abrasives or solvents.
- When not in use, Worklight should be stored in a dry location.

A series of horizontal dotted lines for writing.



Groz Engineering Tools Pvt. Ltd.
Groz Net Industries

Village Kherki Daula, National Highway-8,
Gurugram-122001, Haryana, INDIA

Tel +91.124.282.7700

E-Mail info@groz-tools.com

Url www.groz-tools.com

The GROZ name, GROZ logo and the  mark are trademarks of GROZ Engineering Tools Pvt. Ltd., India