

EA759GB-132A バッテリー対応表

■DSC-Q****

機種名	NP-BN1	NP-BN
	▶製品情報	
DSC-QX10	○	○
DSC-QX100	○	○
DSC-QX30	○	○

■DSC-T****

機種名	NP-FT1	NP-FR1	NP-FD1	NP-FE1	NP-BG1 (*1)	NP-FG1	NP-BN1	NP-BN
						▶製品情報	▶製品情報	
DSC-T1	○							
DSC-T10	○							
DSC-T100					○	○		
DSC-T11	○							
DSC-T110							○	
DSC-T2			○					
DSC-T20					○	○		
DSC-T200			○					
DSC-T3	○							
DSC-T30		○						
DSC-T300			○					
DSC-T33	○							
DSC-T5	○							
DSC-T50		○						
DSC-T7				○				
DSC-T70			○					
DSC-T700			○					
DSC-T77			○					
DSC-T9	○							
DSC-T90			○					
DSC-T900			○					

DSC-T99/T99D								○	
DSC-TF1								○	○
DSC-TX1			○						
DSC-TX10								○	
DSC-TX100V								○	
DSC-TX20								○	○
DSC-TX30								○	○
DSC-TX300V								○	○
DSC-TX5								○	
DSC-TX55								○	○
DSC-TX66								○	○
DSC-TX7								○	
DSC-TX9								○	

*1 付属バッテリーのため販売品ではありません。別売バッテリーとしてはNP-FG1をご利用ください。

■DSC-W****

機種名	NH-AA	NP-BG1 (*1)	NP-FG1 ▶製品情報	NP-BK1	NP-BN1 ▶製品情報	NP-BN	NP-BX1 ▶製品情報
DSC-W1	○						
DSC-W110		○	○				
DSC-W120		○	○				
DSC-W170		○	○				
DSC-W190				○			
DSC-W200		○	○				
DSC-W220		○	○				
DSC-W270		○	○				
DSC-W30		○	○				
DSC-W300		○	○				
DSC-W320					○		
DSC-W35		○	○				
DSC-W350/W350D					○		
DSC-W380					○		
DSC-W5	○						

DSC-W50		○	○			
DSC-W530					○	
DSC-W550					○	
DSC-W570/W570D					○	
DSC-W610					○	○
DSC-W630					○	○
DSC-W7	○					
DSC-W730					○	○
DSC-W80		○	○			
DSC-W810					○	○
DSC-W830					○	○
DSC-WX1		○	○			
DSC-WX10		○	○			
DSC-WX100					○	○
DSC-WX170					○	○
DSC-WX200					○	○
DSC-WX220					○	○
DSC-WX30					○	○
DSC-WX300						○
DSC-WX350						○
DSC-WX5					○	
DSC-WX50					○	○
DSC-WX500						○
DSC-WX60					○	○
DSC-WX7					○	
DSC-WX70					○	○
DSC-WX700						○
DSC-WX800						○

*1 付属バッテリーのため販売品ではありません。別売バッテリーとしてはNP-FG1をご利用ください。