



BRAKE FLUID TESTER


Tester determines quality of brake fluid.

CATCH BAD BREAK FLUID

before it destroys calipers and other brake system components.



1. Remove cap from brake fluid reservoir.
2. Remove probe cap from brake fluid tester.
3. Press power button on top of tester. Green LED lights up.
4. Dip entire length of metal probes into brake fluid.
5. After one second, match color of LEDs with color chart to determine brake fluid quality. Tester automatically powers off after twelve seconds of inactivity.

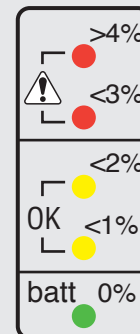

● Tester ON; no water in brake fluid.

● Less than 1% water.

● Approx. 2% water.

● Approx. 3% water. Brake fluid should be changed soon.

● DANGER! At least 4% water. Immediately change brake fluid.

One battery included: 1.5V AAA.

4598 Brake Fluid Tester



11-238 ©2012 OTC