



SPX Corporation
 655 Eisenhower Drive
 Owatonna, MN 55060-0995 USA
 Phone: (507) 455-7000
 Tech. Serv.: (800) 533-6127
 Fax: (800) 955-8329
 Order Entry: (800) 533-6127
 Fax: (800) 283-8665
 International Sales: (507) 455-7223
 Fax: (507) 455-7063

Form No. 521078

**Assembly Instructions
 for:**

**1734
 1734A**

Heavy-duty Truck Wheel Step

Max. Capacity: 300 lbs.

The heavy-duty truck wheel step is designed to help the technician easily reach engine parts.


Safety Precautions



Caution: To prevent equipment failure or damage resulting in personal injury:



- Read, understand, and follow these instructions.
- If the operator cannot read English, operating instructions and safety precautions must be read and discussed in the operator's native language.
- Si el operador no puede leer inglés, las instrucciones de operación y las precauciones de seguridad deberán leerse y comentarse en el idioma nativo del operador.
- Si l'utilisateur ne peut lire l'anglais, les instructions et les consignes de sécurité doivent lui être expliquées dans sa langue maternelle.

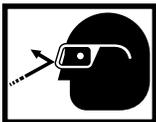

- Wear eye protection that meets the requirements of ANSI Z87.1 and OSHA.
- Inspect the condition of the wheel step before each use; do not use a wheel step if it's damaged, altered, or in poor condition.



- Do not exceed the rated capacity of the wheel step.
- The vehicle must be located on a hard, level surface to use the wheel step. The vehicle must be stable.
- Chock the wheels of the vehicle and set the parking brake before using the wheel step.

Placement Instructions

Wheel Step Placement

1. Remove pins and adjust wheel step to best fit the width and the height of the tire; then replace pins.
2. Carefully place wheel step over the tire.
3. Before standing on the step, test it by placing one foot onto the grid to verify the wheel step is secure.

