


EA983S - 22
EA983S - 23
(ダイヤル錠)

本体:真鍮製
ツル部分:ハードスチール製
4桁ダイヤル式(番号変更可能)
ツル

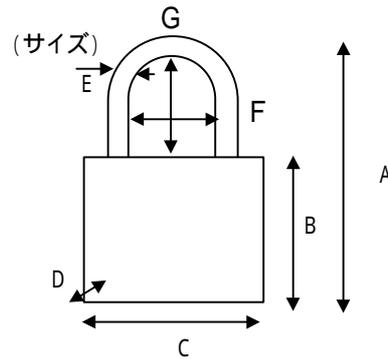

品番	A	B	C	D	E	F	G	重さ(g)
EA983S-22	83	47	51	24.3	8	25	25	300
EA983S-23	112	47	51	24.3	8	25	54	320

(単位mm)

工場出荷時は“0 - 0 - 0”で解錠します。

ツルを一旦押し込んでから引き上げてください。
(ダイヤルの変更方法)

ロックが開いた状態で、リセットキーを本体側面の穴に挿し込みます。

キーを押しながら90°まわします(キーはその位置で止まります)。あまり強い力でキーを押し込まない様にしてください。故障の原因になります。

各ダイヤルを回して希望する数字(0~9)に合せます。リセットキーを抜き取り完了です。

*** セットした新しい番号は決して忘れないでください。
次の番号変更は新しい番号からスタートしてください。**





Master Lock.

Combination Reset Tool
Outil de codage
Llave para cambiar combinación



Illustration 1

Control Key
Clé de commande
Llave de control

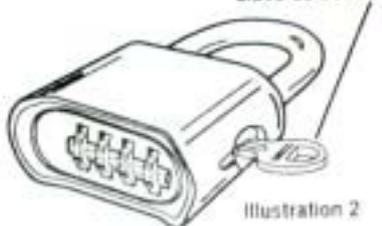


Illustration 2

To open using the combination:

NOTE: The lock is factory set to open with a combination of 0-0-0-0.

1. Set the combination wheels to the correct combination.

(See Illustration 1.)

2. Press down on the shackle, then pull to open.

To lock:

1. Turn one or more wheels to scramble the combination.

2. Press the shackle into the body until it locks.

To open with the control key:

1. Insert the control key into the cylinder. (See Illustration 2.)

2. Press down on the shackle, turn the key to the right (clockwise) and pull on the shackle to open.

3. Turn the control key to the left, to the original position, and remove key.

To change the combination:

NOTE: The combination can only be changed when the lock is opened by dialing the combination.

1. Open the lock using the combination. (See instructions above.)

2. Insert the combination change tool in the small hole in the side of the body. (See Illustration 1.)

3. Push the tool against the spring force and turn one-quarter turn left or right.

NOTE: The combination change tool will be held in position by the spring force.

4. Set the combination wheels to the new combination.

5. Turn the combination change tool back one-quarter turn and remove.

IMPORTANT: The lock is now set to the new combination. Record the new combination and store in a safe place.