

Standard Drum Lifter/Dispenser DL-55 (Part # 240032)

Operating Instructions and Parts Manual

ATTENTION: TO INSURE SAFE AND EASY USE OF YOUR WESCO DRUM LIFTER/DISPENSER, READ THESE INSTRUCTIONS BEFORE USING.

Description

The Wesco Standard Drum Lifter/Dispenser is designed to easily lift 55 gallon drums and dispense the contents. It can lock in either a horizontal or vertical position and is a product with over 25 years of proven, reliable quality.

This product is distributed by:

Wesco Industrial Products, LLC

1250 Welsh Road North Wales, PA 19454

Tel: 215-699-7031 Fax: 215-699-3836

Contact the factory for parts information and ordering. Visit us on the web at www.wescomfg.com

Unpacking

When unpacking the Wesco Product, check carefully for shipping damage and missing parts. If damage has occurred or any parts are missing, file a claim with the delivering carrier within 24 hours and notify the dealer from whom the unit was purchased.

Warranty Repairs

If the unit does not work properly, contact your dealer or the factory (215-699-7031) for units less than 90 days old.

Non-Warranty Service

If units are older than 90 days, repairs can be made easily on site with factory supplied parts.

NOTE: Do not send units to the factory for service without first obtaining a "Return Merchandise Authorization" (RMA) number from the customer service department. We will not be responsible for merchandise returned without proper authorization.

General Safety Information

Warning: The Wesco Standard Drum Lifter/Dispenser is intended for specific functions. Please adhere to the following instructions to insure safe and proper use.

- (1) Maximum capacity Full Drum 800 Lbs.
 - Half Drum 500 Lbs.
- (2) Do not exceed rated capacity. Injury to persons or property may result from overloading and misuse.
- (3) Never move the unit unless the load is firmly secured in saddle.
- (4) Never move loaded unit over people.
- (5) Transport with drum in vertical position.
- (6) Periodically inspect for damages and loose or missing hardware. If required remove from service and repair.
- (7) Use only genuine Wesco replacement parts when servicing.
- (8) Only use on Steel 55 Gallon Drums! (Unless 30 Gallon Converter Kit for 30 gallon drums or FBA: Adapter Drum Lift/Carrier for fiber drums are installed)

Maintenance

- Lubricate moving parts periodically.
- Check bolts and nuts frequently for tightness.



Figure 1

LIMITED WARRANTY

WESCO INDUSTRIAL PRODUCTS (WESCO) warrants to the purchaser of this product for a period of ninety (90) days from the date of purchase that this product shall be free of defects in material and/or workmanship, as follows:

1. WESCO will supply, at no charge, new or rebuilt replacements for any part that fails through a defect in material and/or workmanship during the warranty period. To obtain warranty service, you must deliver the product prepaid, to the WESCO factory.

2. This warranty does not cover any product or product part which has been subject to accident, misuse, abuse or negligence. WESCO shall only be liable under this warranty if the product is used the manner intended by the manufacturer as specified in the written instructions furnished with this product.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE PURCHASER. ANY EXPRESS WARRANTY NOT PROVIDED IN THIS WARRANTY DOCUMENT, AND ANY REMEDY FOR BREACH OF CONTRACT THAT, BUT FOR THIS PROVISION, MIGHT ARISE BY IMPLICATION OR OPERATION OF LAW, IS HEREBY EXCLUDED AND DISCLAIMED. UNDER NO CIRCUMSTANCES SHALL WESCO BE LIABLE TO PURCHASER OR ANY OTHER PERSON FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, WHETHER ARISING OUT OF BREACH OF WARRANTY, EXPRESS OR IMPLIED, A BREACH OF CONTRACT OR OTHERWISE. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR ANY PARTICULAR PURPOSE ARE EXPRESSLY LIMITED IN DURATION TO THE DURATION OF THIS LIMITED WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long any implied warranty lasts, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.



Standard Drum Lifter/Dispenser DL-55 (Part # 240032)

Operating Instructions and Parts Manual

ATTENTION: TO INSURE SAFE AND EASY USE OF YOUR WESCO DRUM LIFTER/DISPENSER, READ THESE INSTRUCTIONS BEFORE USING.

Operation Instructions

- (1) Hang lifter ring on crane or hoist hook and position until along side of drum.
- (2) Attach lifter saddle around center of drum (between rolling hoops) and secure with chain and tightener.
- (3) Transport drum to destination for pouring.
- (4) When pouring out from drum pull out saddle catches located on each side of drum. Tilt drum (catches can be engaged in pouring position). Drum should be returned to vertical position with catches engaged before transport.

Note: Do not exceed capacity of 800 lbs for a full drum, or 500 lbs. for a half full drum.

Item	Part No.	Description	Qty.
1	054097	Frame Weldment	1
2	054061	Saddle Weldment	1
3	270411	Tightener Claw Kit (Includes Item 4 & Hardware)	1
4	150321	Claw	1
5	053741	Plunger	1
6	108470	Compression Spring	1
7	108599	Spring Pin	1
8	051991	Ratchet Handle Assembly (Includes Item 9 & Item 10)	1
9	054071	Casting Ratchet	1
10	101242	Black Handgrip	1
11	053417	Saddle Chain	1
12	101107	Chain	3.03'
13	054063	Turnover Handle	1
14	108226	Black Handgrip 1"	1
15	151219	Hairpin Pin	1
16	270040	30 Gallon Converter Kit	1
17	270402	FBA: Adapter Drum Lift/Carrier	1

Spare Parts

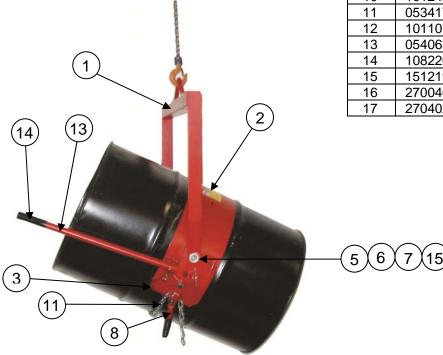


Figure 2