


EA116SC(1.12KW/25Lタンクエアコンプレッサー)

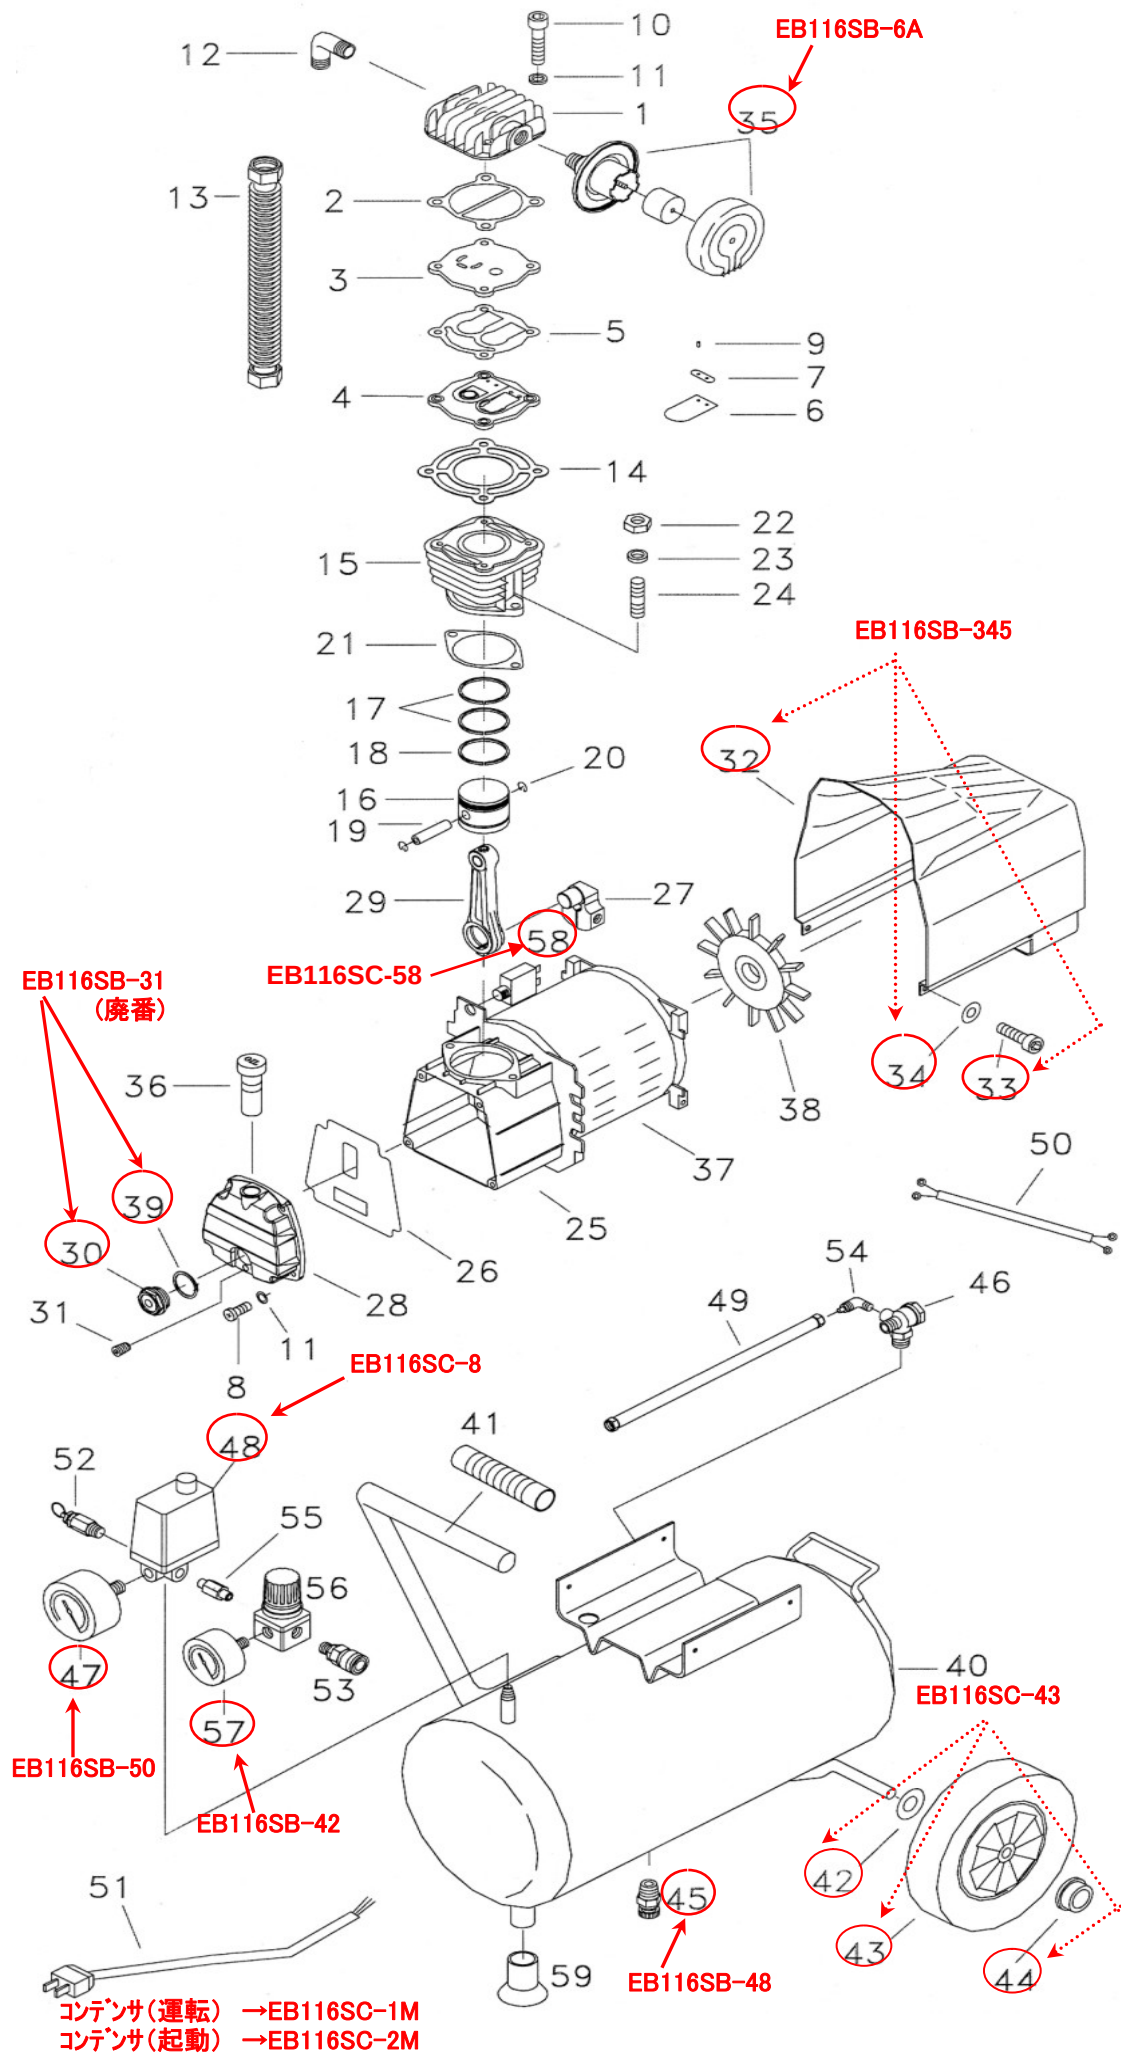

PARTS LIST

No.	Parts No.	Description	Q'ty
1	SD1525-01	Cylinder Head	1
2	SD1525-02	Cylinder Head Packing	1
3	SD1525-03	Inlet Valve Seat	1
4	SD1525-04	Exhaust Valve Seat	1
5	SD1525-05	Inlet & Exhaust Valve Seat Packing	1
6	SD1525-06	Inlet & Exhaust Valve Plate	2
7	SD1525-07	Inlet & Exhaust Spring Plate	2
8	SD1525-08	In Six-Angle Bolt	4
9	SD1525-09	Pin	4
10	SD1525-10	In Six-Angle Bolt	4
11	SD1525-11	Spring Washer	8
12	SD1525-12	Exhaust Elbow	1
13	SD1525-13	Exhaust Tube Assembly	1
14	SD1525-14	Valve Seat Packing	1
15	SD1525-15	Cylinder	1
16	SD1525-16	Piston	1
17	SD1525-17	Compression Ring	2
18	SD1525-18	Oil Control Ring	1
19	SD1525-19	Piston Pin	1
20	SD1525-20	Piston Pin Snap Ring	2
21	SD1525-21	Cylinder Packing	1
22	SD1525-22	Set Nut	2
23	SD1525-23	Spring Washer	2
24	SD1525-24	Double Head Screw	2
25	SD1525-25	Crankcase	1
26	SD1525-26	Front Cover Packing	1
27	SD1525-27	Crankshaft	1
28	SD1525-28	Crankcase Cover	1
29	SD1525-29	Rod	1
30	SD1525-30	Oil Guage	1
31	SD1525-31	Oil Draning Plug	1
32	SD1525-32	Motor Cover	1
33	SD1525-33	In Six-Angle Bolt	4
34	SD1525-34	Spring Washer	4
35	SD1525-35	Air Filter	1
36	SD1525-36	Air Flue Oil Filling Assembly	1
37	SD1525-37	Motor	1
38	SD1525-38	Radiation Fan	1
39	SD1525-39	Oil Gauge Packing	1
40	SD1525-40	Air Tank	1
41	SD1525-41	Rubber Handle	1
42	SD1525-42	Plate Washer	2
43	SD1525-43	Tank Wheel	2
44	SD1525-44	Tank Wheel Nut	2
45	SD1525-45	Drain Cock	1
46	SD1525-46	Check Valve	1
47	SD1525-47	Pressure Guage	1
48	SD1525-48	Pressure Switch	1
49	SD1525-49	Unloading Tube Aaa'y	1
50	SD1525-50	Cable Wire	1
51	SD1525-51	Power Wire	1
52	SD1525-52	Safety Valve	1
53	SD1525-53	Couple	1
54	SD1525-54	Unloading Elbow	1
55	SD1525-55	Nipple	1
56	SD1525-56	Regulator Valve	1
57	SD1525-57	Pressure Guage	1
58	SD1525-58	Circuit Breaker	1
59	SD1525-59	Tank Feet Rubbre Packing	1