
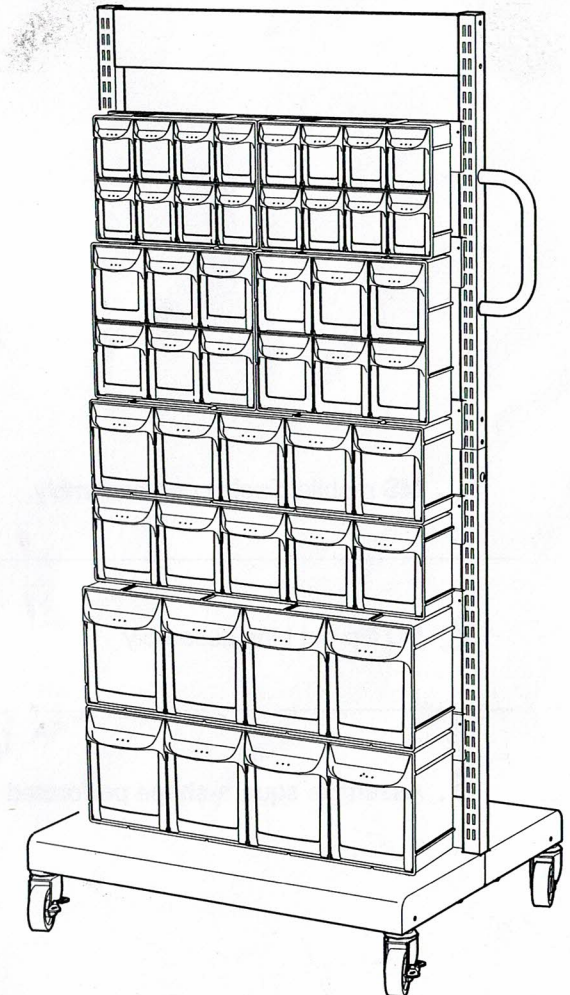


MS mobile display cart

assembly instructions

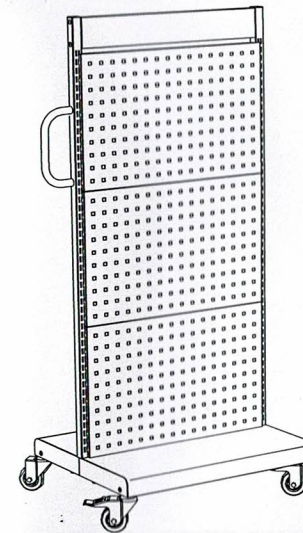


1. MS mobile display cart assembly 1

2. FO flip out bins assembly 13


3. Assemble square-shape perforated pegboard 16

Casters


Standard casters

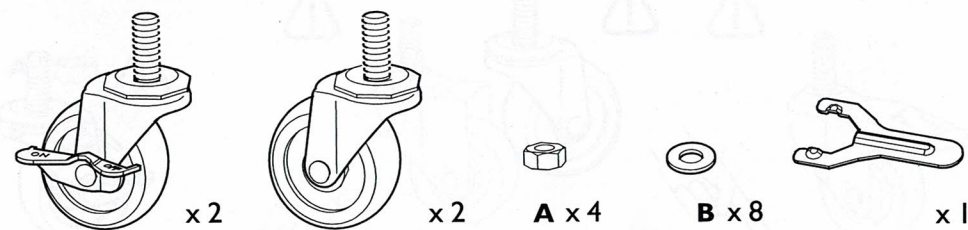


Optional Heavy-Duty Caster

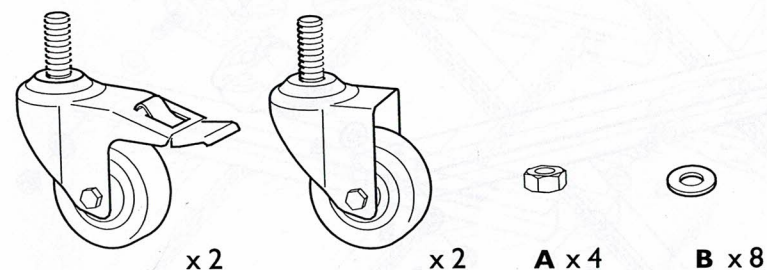


Screw package

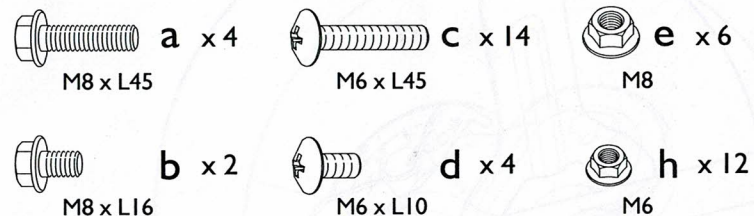

Pipe plug

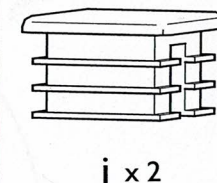

Required tools




FO accessory




The assembly process of MS Mobile display cart with standard casters

1.1-1


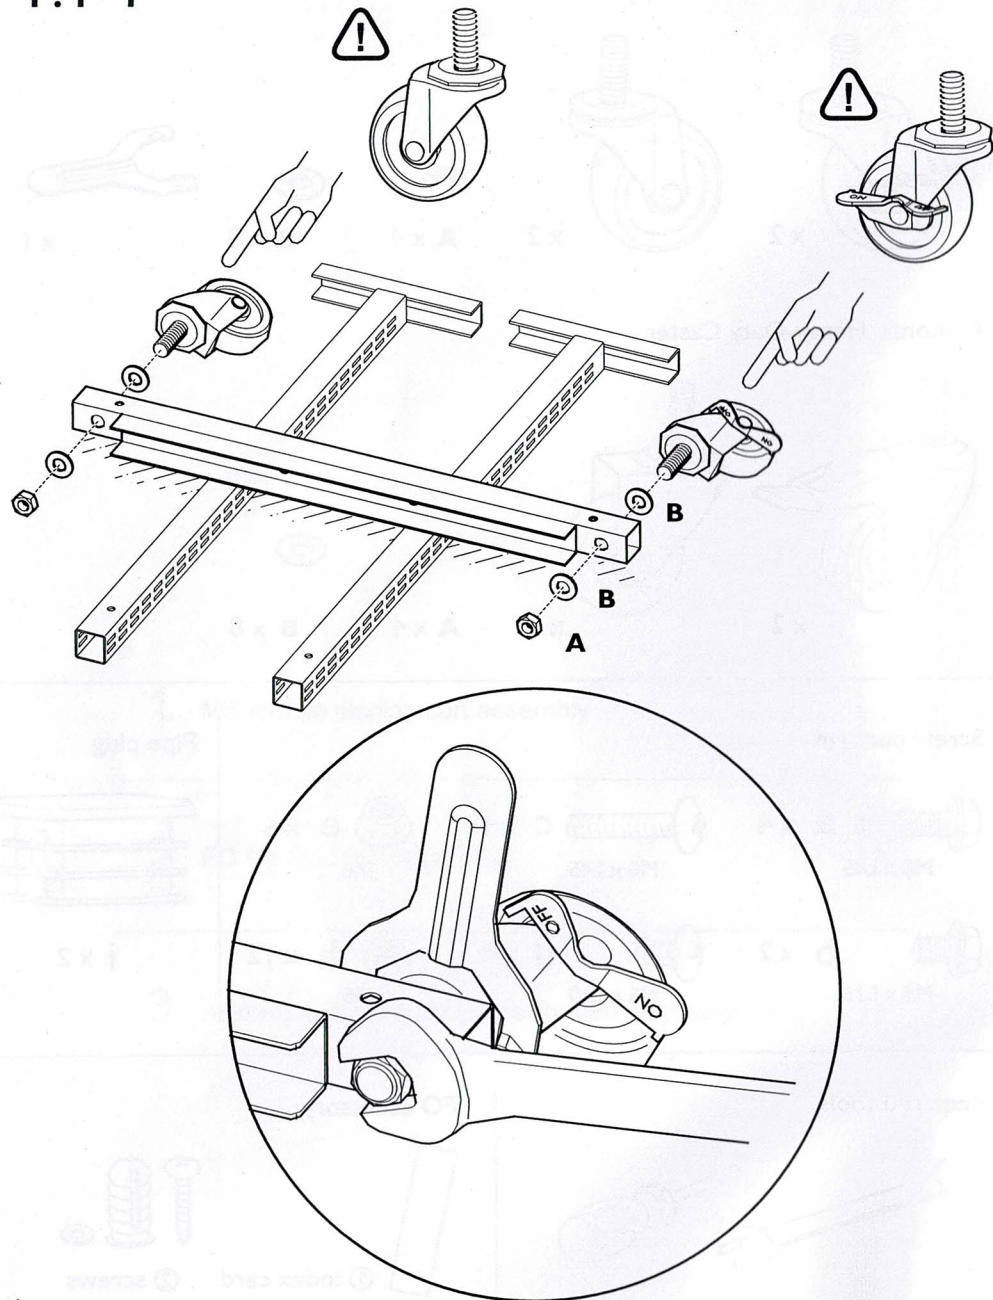


Optional : The assembly process of MS Mobile display cart with optional heavy-duty caster.




1.1-2

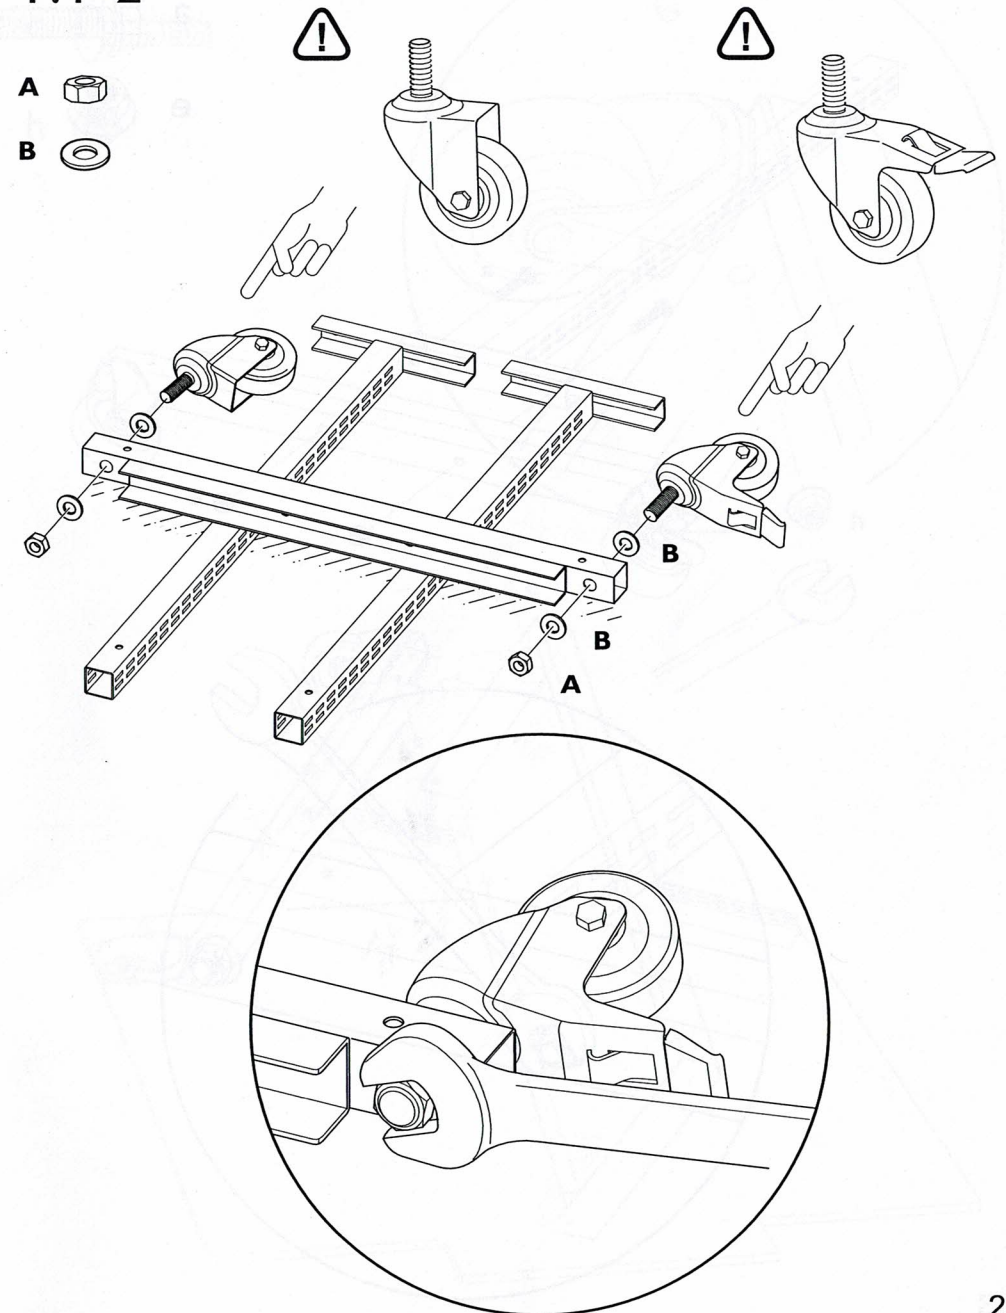




1.2

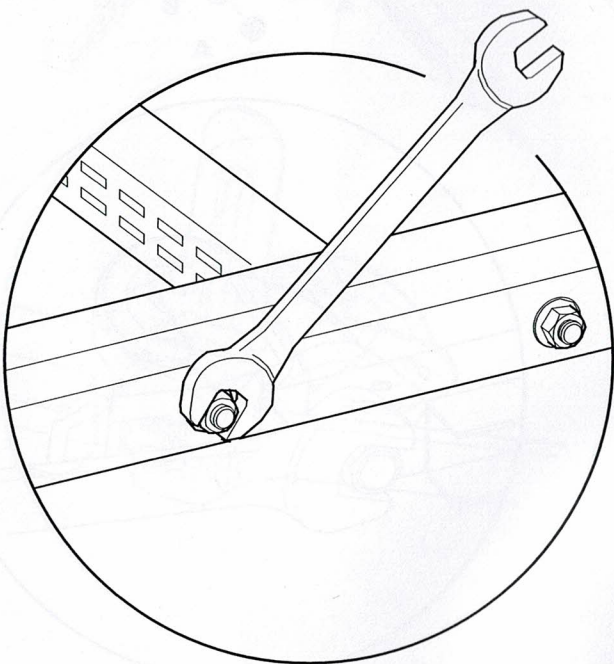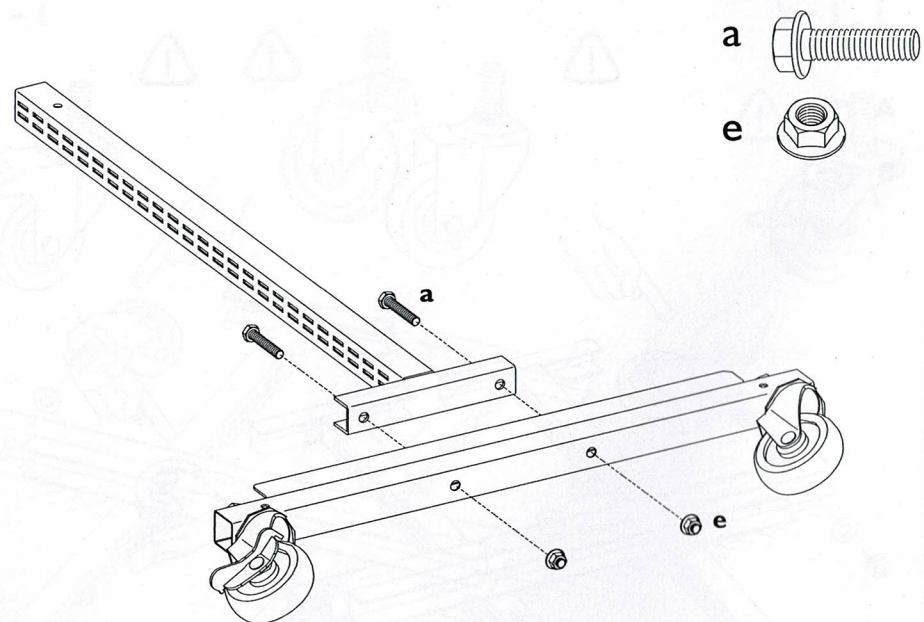




1.3

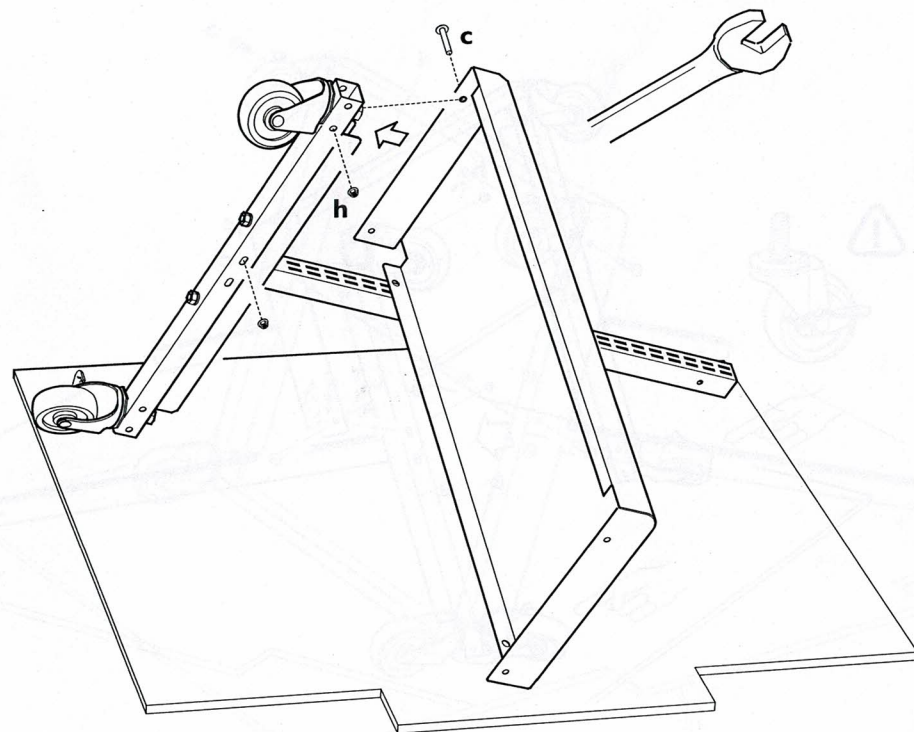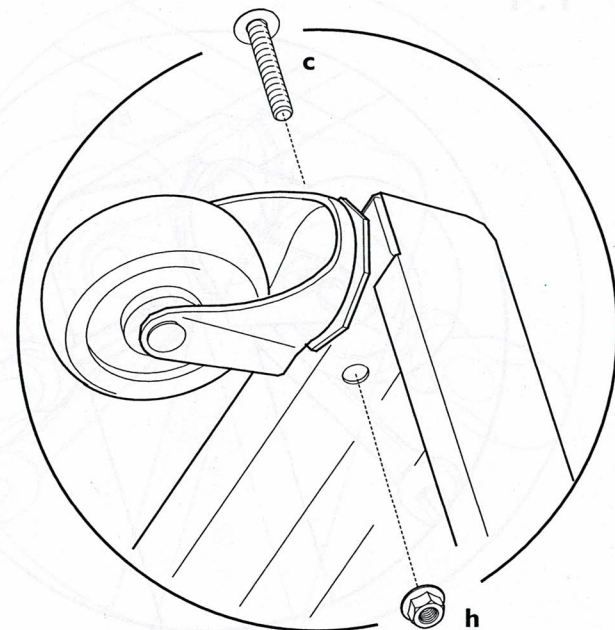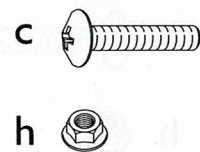




1.4

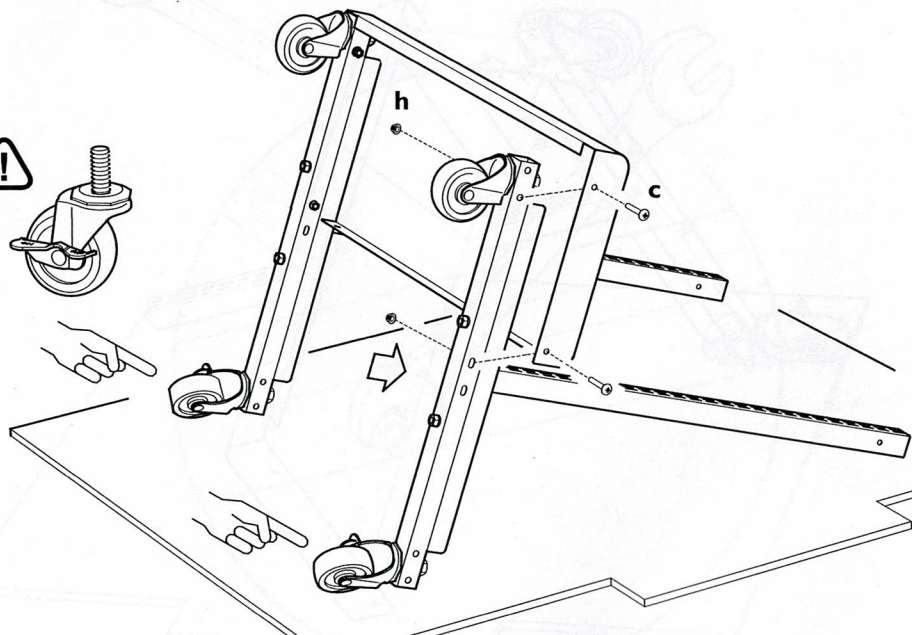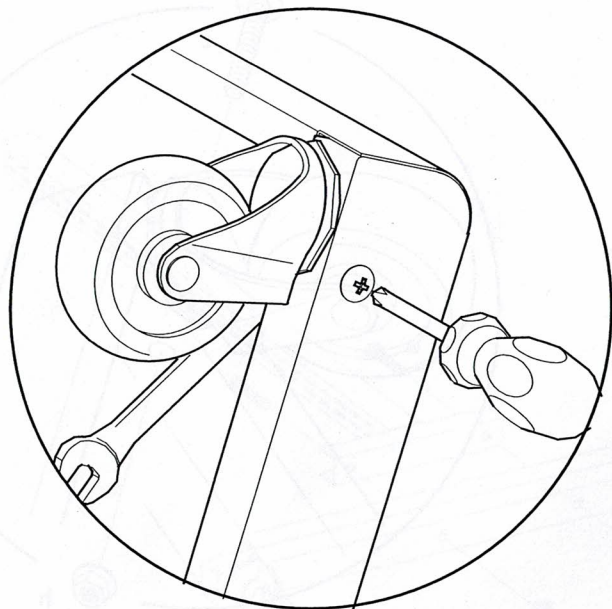


1.5

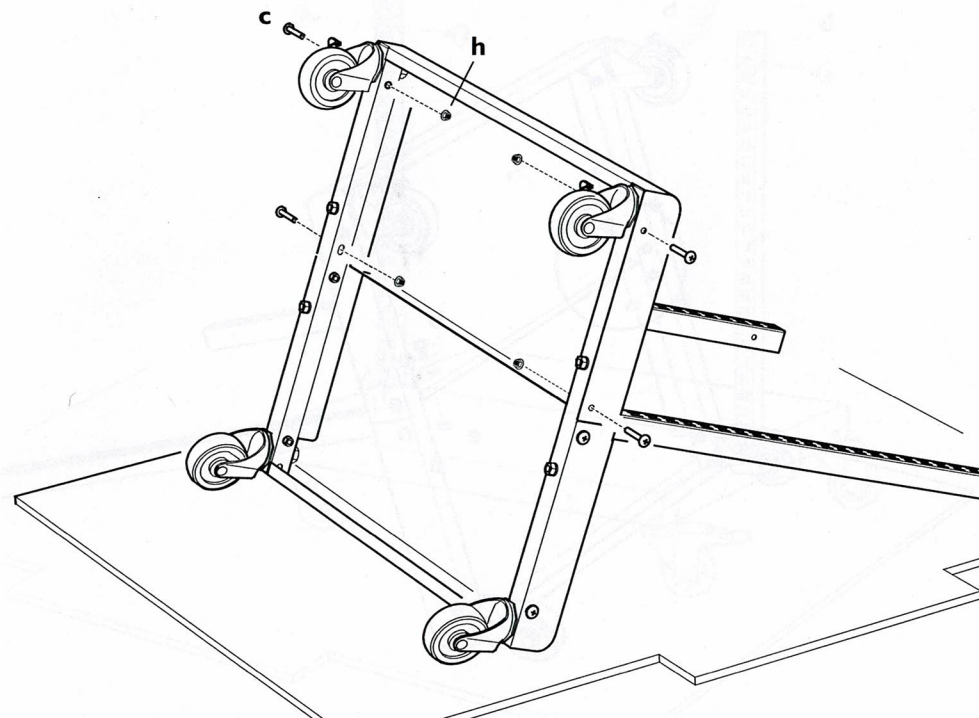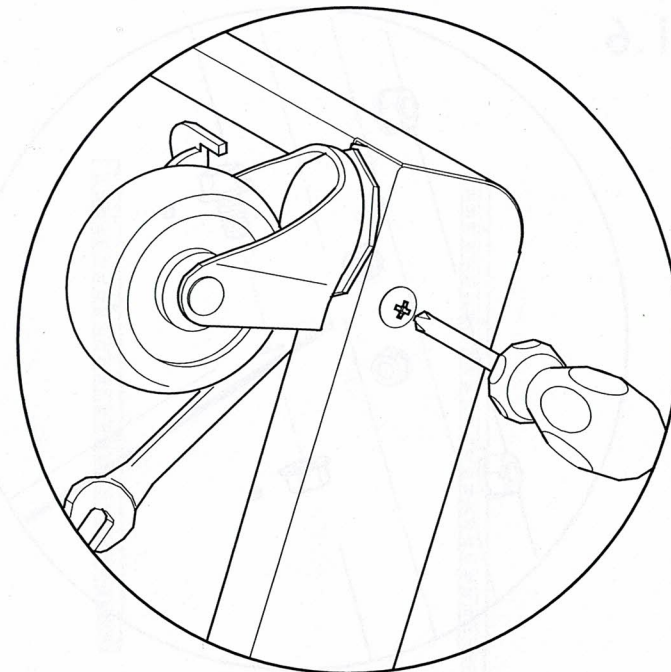



1.6

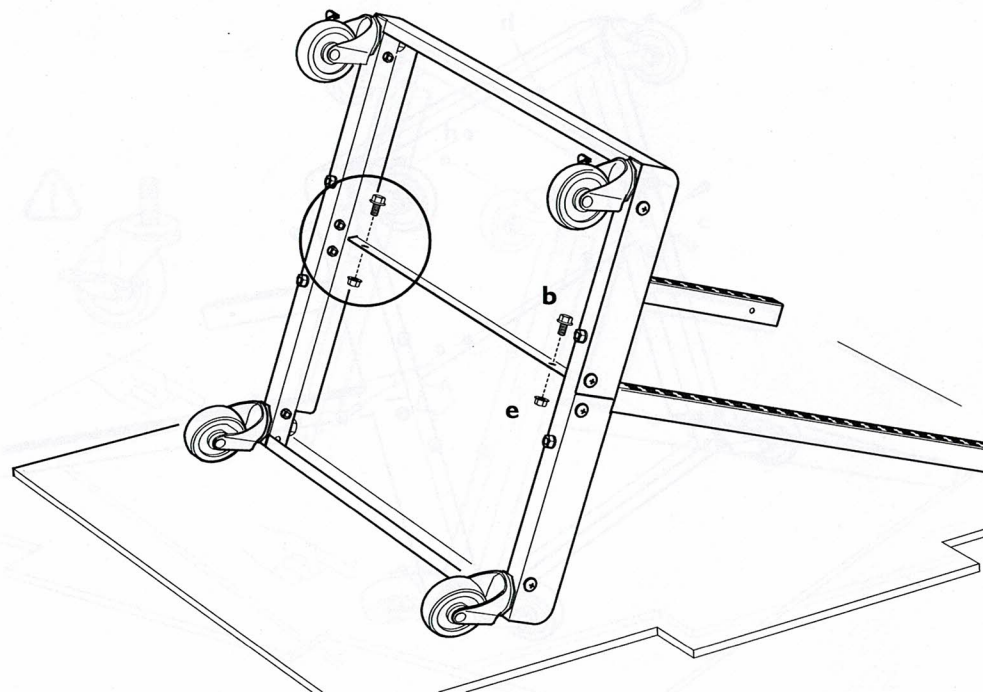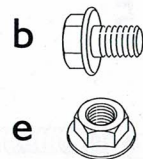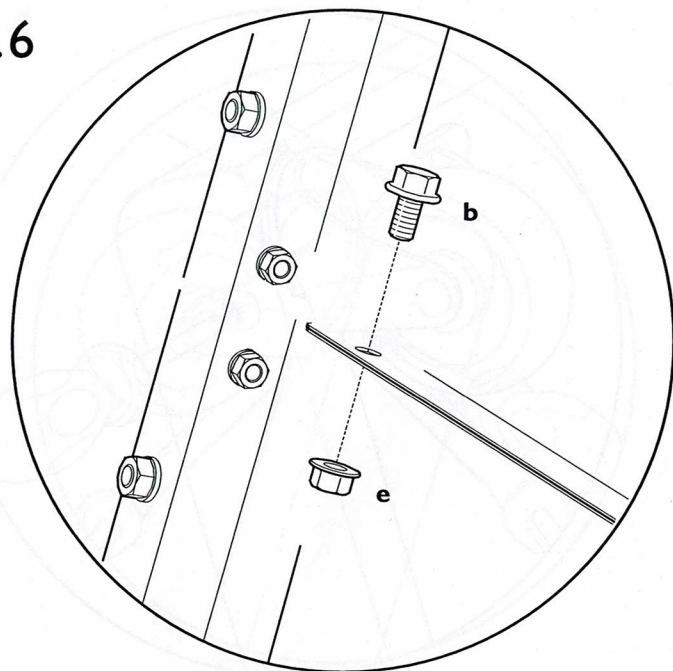


1.7

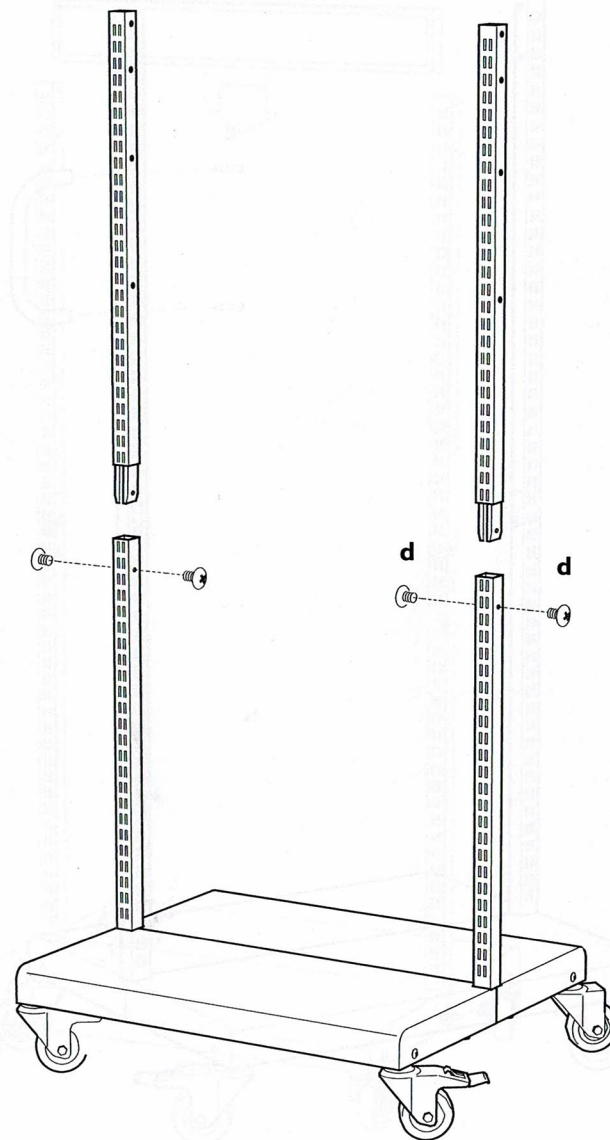

1.8

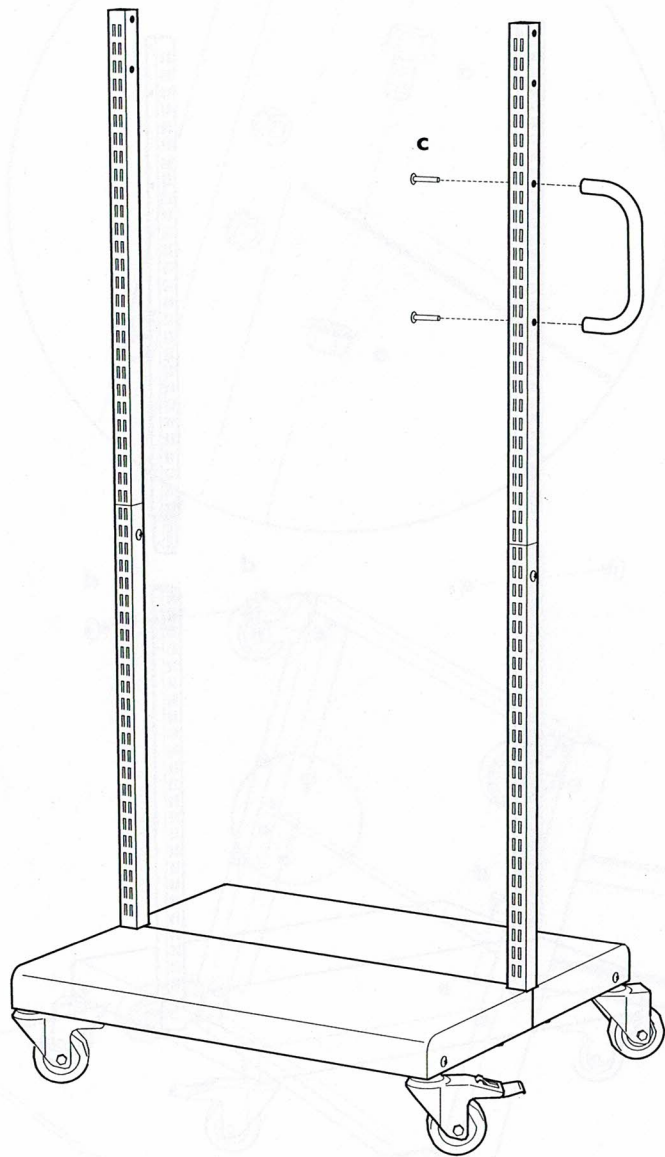


1.9

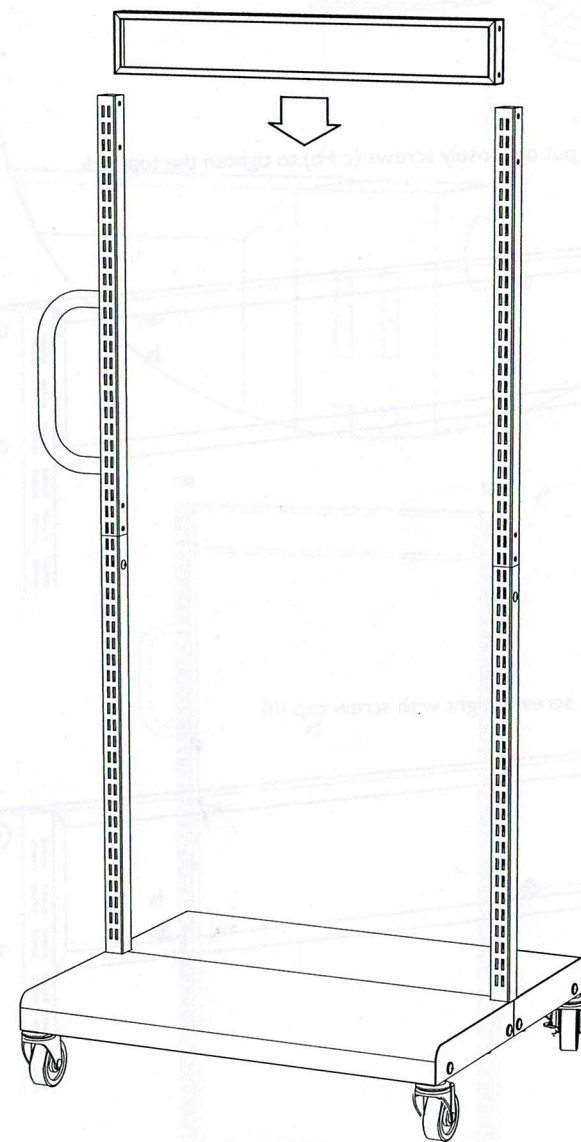


I.10





1. First, put on loosely screws (c+h) to tighten the top rack.

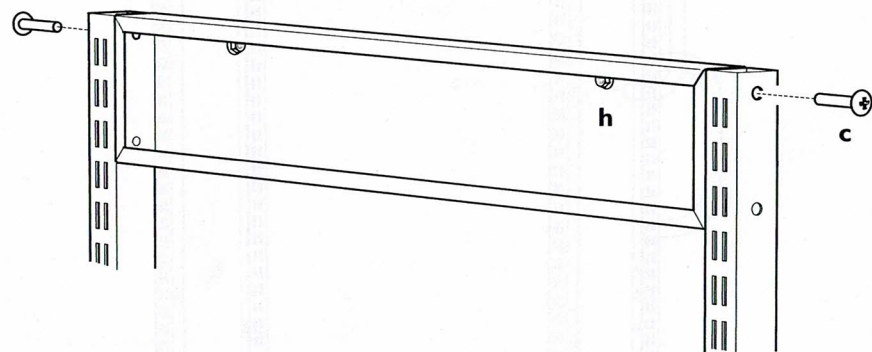

2. Then, screw it tight with screw cap (h)




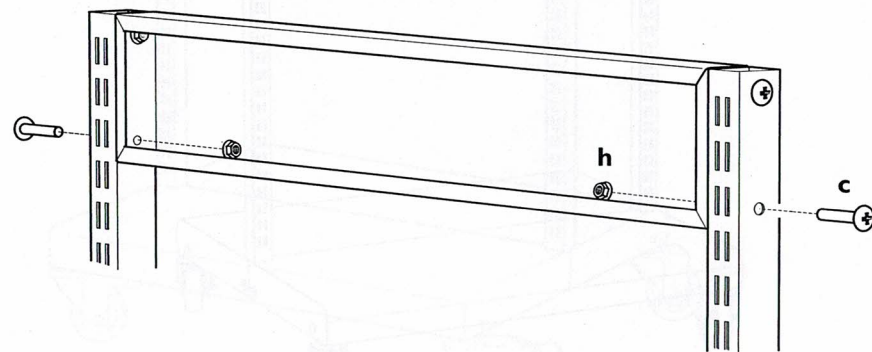


I.11

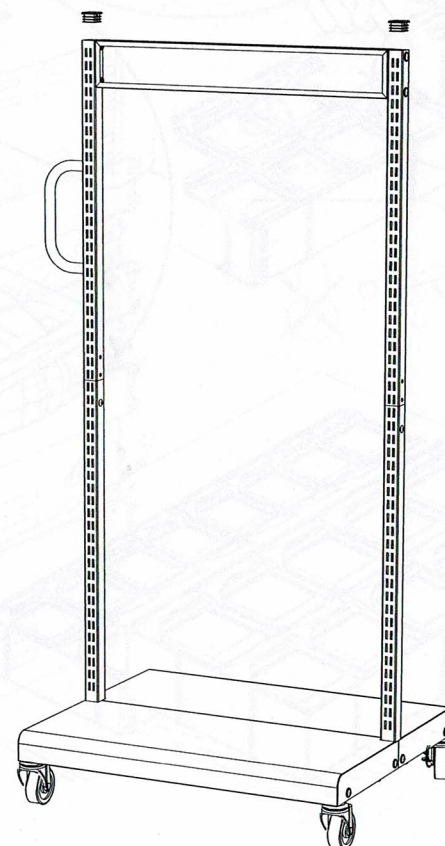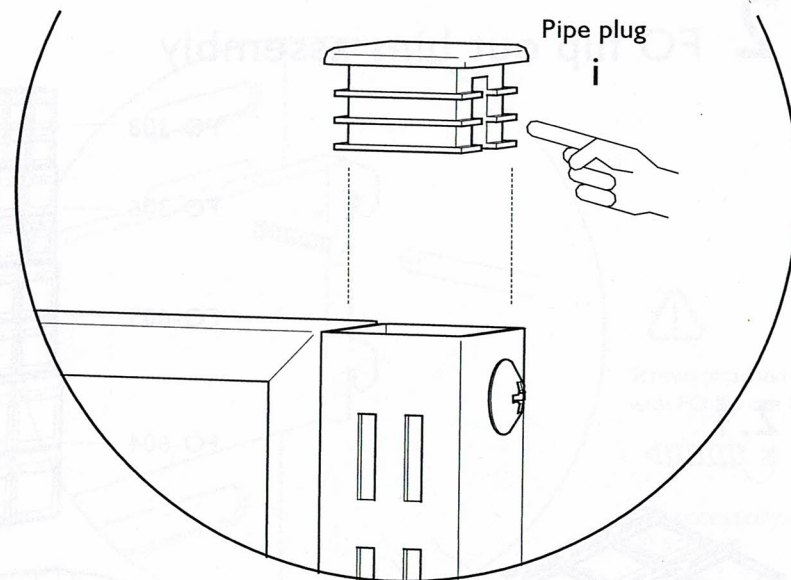


2 FO flip out bins assembly

2.1

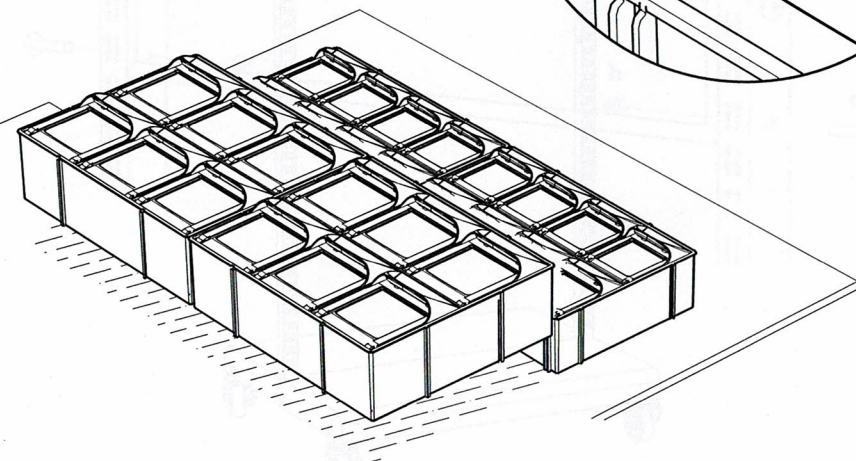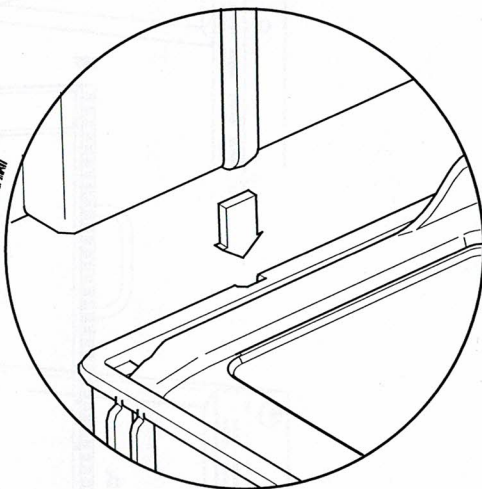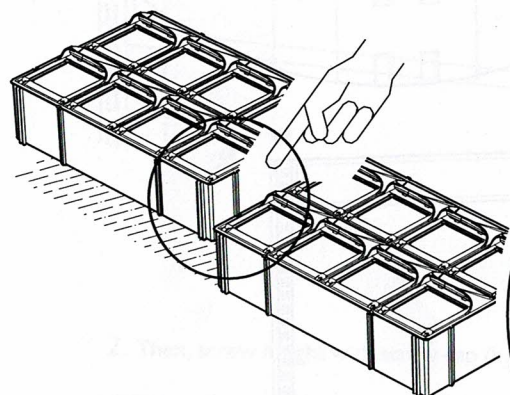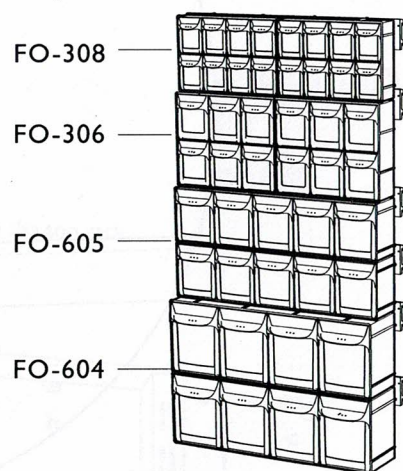

2.2

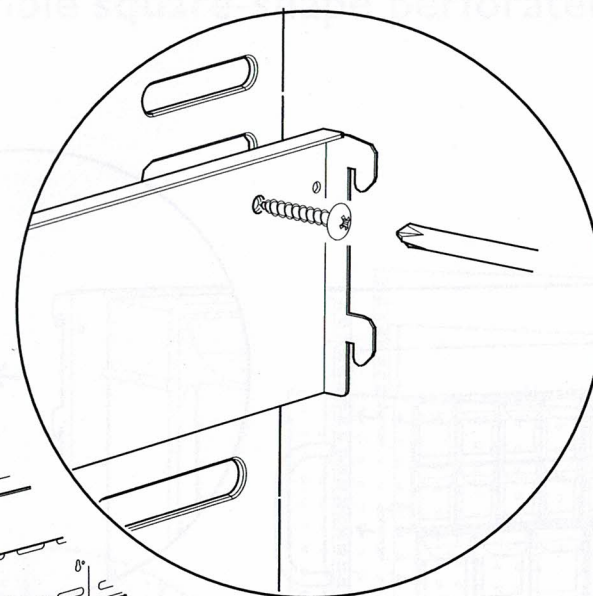



Screws attached
with FO flip out bins




FO accessory
② screws



Screw hole

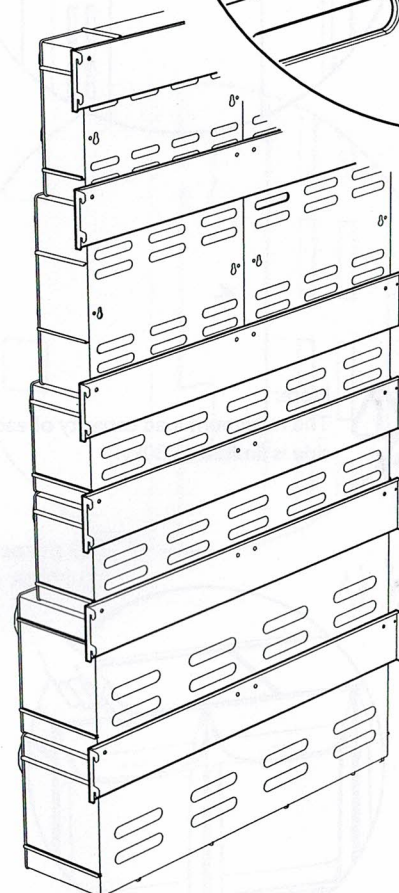

2.3 FO flip out bins assembly

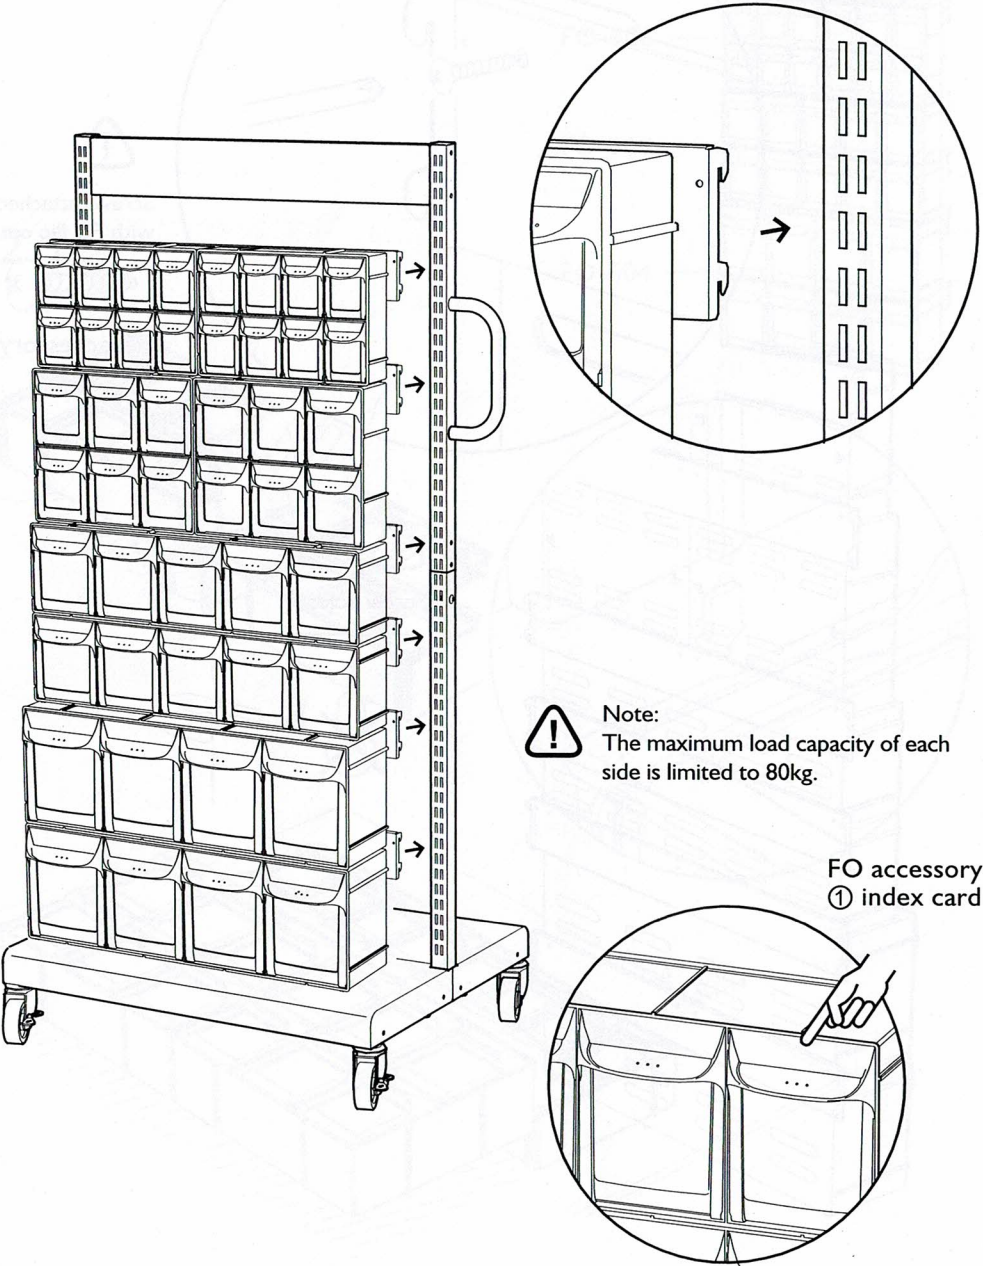

3 Assemble square-shape perforated pegboard

